



**PLAN  
DETAIL OF DRIVEWAY**

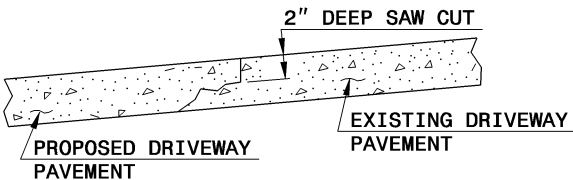

**METHOD OF TIE IN**

WHEN EXISTING DRIVEWAY PAVEMENT IS CONCRETE, SAW CUT 2" DEEP JOINT AT THE POINT OF TIE-IN. SAW JOINT PERPENDICULAR TO EDGE OF EXISTING DRIVEWAY PAVEMENT.

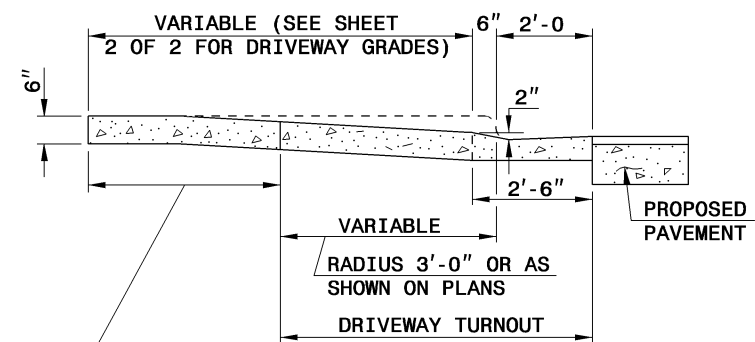

**SECTION C-C**